

The Hisense logo is displayed in a bold, white, sans-serif font. The background of the entire page features a dark grey gradient on the left, transitioning into several broad, sweeping, curved bands of lighter grey and white that flow from the bottom left towards the top right, creating a sense of dynamic movement.

Hisense

life reimagined

USER'S OPERATION MANUAL

Before operating this unit, please read this manual thoroughly, and retain for future reference

RR33D6ABE

English

Contents

Brief introduction -----	2	Helpful hints and tips -----	9
Important safety instructions -----	2	Cleaning and care -----	10
First use and Installation -----	5	Reversing the door-----	11
Description of the appliance -----	7	Troubleshooting -----	12
Operation -----	7	Disposal of the appliance -----	13

Brief introduction

Thank you for choosing our products. We are sure you will find your new appliance a pleasure to use. Before you use the appliance, we recommend that you read through these instructions carefully, which provides details about its usage and functions.

●Please ensure that all people using this appliance are familiar with its operation and safety features. It is important that you install the appliance correctly and pay attention to the safety instructions carefully.

- We recommend that you wait 4 hours with the unit upright, before connecting the appliance to allow the refrigerant to flow back into the compressor.
- We recommend that you keep this users manual with the appliance for future reference and retain it for any future users.
- If you feel that the appliance is not operating correctly, please check the troubleshooting page for assistance. If still in doubt contact the customer service help line for assistance at 1-877-465-3566

Important safety instructions

General safety and daily use



It is important to use your appliance safely. It's recommended that you follow the guidelines below.

- Store any food in accordance with the storage instructions from the manufacturer.
- Don't try to repair the appliance yourself. It is dangerous to alter the specifications or modify this product in any way. Any damage to the cord may cause short circuit, fire or electric shock.
- Don't place hot items near the plastic components of this appliance.

- Frozen food must not be refrozen once it has been thawed out.
- Don't store bottled or canned drinks (especially carbonated drinks) in the chiller compartment. Bottles and cans may explode.
- To avoid items falling and causing injury or damage to the appliance, do not overload the door racks or put too much food on the shelves.

WARNING-Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.

WARNING-Do not damage the refrigerant circuit.

WARNING-If the power cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

WARNING-Keep ventilation openings in the appliance enclosure, or in the built-in structure, clear of obstruction.

WARNING-When disposing of the appliance, do so only at an authorized waste disposal center. Do not expose to flame.

WARNING-Do not store explosive or substances such as aerosol cans with a flammable propellant in this appliance.

Safety for children and infirm persons



This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or a lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

- Keep all packaging away from children to avoid risk of suffocation.
- Protect children from being scalded by touching the very hot compressor at the rear bottom of the appliance.
- Don't place items on top of the appliance as this could cause injury should they fall off.
- Never allow children to play with the appliance by hanging or standing over or on the door, racks, and shelves etc.

WARNING-When disposing of the appliance, take off the doors. Leave all the shelves in place so that children may not easily climb inside.

Safety about electricity



To avoid the risks that are always present when using an electric

appliance, we recommend that you pay more attention to the instructions about electricity below.

- Unpack the appliance and check through the appliance. Should any damage be evident, don't plug in the appliance, but contact the shop immediately from which you purchased it. Keep all packing materials in this case.
- The appliance must be supplied with single phase alternating current of 115V/60Hz.
- The main plug must be accessible when the appliance is installed.
- This appliance must be grounded. Do not use ungrounded (two prong) adapters.
 - This appliance is fitted with a ground plug in accordance with local standards. The ground plug should be suitable for use in all houses fitted with sockets in accordance with current specifications. If the outlet isn't suitable for the grounded plug, do not cut off the ground prong. Instead, please contact a qualified, registered electrician to install the correct outlet.
- Do not use extension cords or multiple sockets which could cause overloading of wiring circuits and could cause a fire. Always plug your appliance into its own individual electrical socket which has a voltage rating that matches the rating plate.
- Make sure that the plug is not squashed or damaged. Damage may cause short circuit, electric shock or overheat and even cause a fire.
- Do not insert the main plug and use the appliance if the socket is broken. There is a risk of electric shock or fire.
- Switch off the appliance and disconnect it from the main power before you clean or move it.

- Never unplug the appliance by pulling on the electrical cord. Always grip the plug firmly and pull straight out from the socket to prevent damaging the power cord.

- Any electrical component must be replaced or repaired by a qualified electrician or authorized service engineer.

Only genuine Hisense service parts should be used.

WARNING-Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.

The refrigerant and risk of fire



The appliance contains a small quantity of refrigerant (R600a) in the refrigerant circuit.

Check the compressor label on the rear of the appliance to see which refrigerant is used for your appliance.

- If the appliance contains iso-butane (R600a) refrigerant, which is environmentally friendly but flammable, ensure that tubing of the refrigerant circuit is not damaged during transportation and installation to avoid risk of fire caused by leaking refrigerant.

- Keep burning candles, lamps and other items with naked flames and sources of ignition away from the appliance and



ventilate the room thoroughly to avoid the risk of fire and eye injury should any leakage of refrigerant (R600a) exist.

- Do not store products which contain flammable propellants (e.g. spray cans or explosive substances) in the appliance.

State of California Proposition 65 Warnings:

WARNING: This product contains one or more chemicals known to the State of California to cause cancer.

WARNING: This product contains one or more chemicals known to the State of California to cause birth defects or other reproductive harm.

First use and Installation


Cleaning before use

- Before using the appliance for the first time, wash the interior and all internal accessories with lukewarm water and some neutral soap so as to remove the typical smell of a brand new product, then dry thoroughly.

Important! Do not use detergents or abrasive powders, as these will damage the finish.

Important! It is necessary to have good ventilation around the refrigerator to allow for the dissipation of heat, high efficiency, and low power consumption. For this reason, sufficiently cleared space should be available around the refrigerator. It is advisable for there to be 75 mm / 3 inches separating the back of the refrigerator to the wall at least 100 mm / 4 inches of space on its two sides, a height of over 100 mm / 4 inches from its top and a clear space in front to allow the doors to open 180°.

Appliances must not be exposed to rain. Sufficient air must be allowed to circulate in the low rear section of the appliance, as poor air circulation can affect performance. Appliances should be positioned away from heat sources such as heaters and direct sunlight.

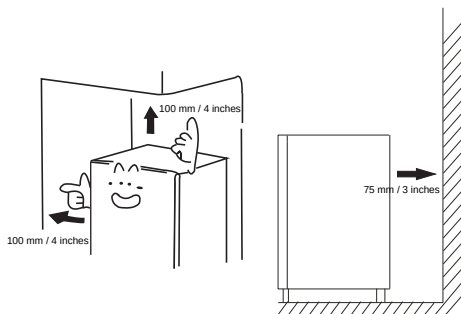

Installation Positioning




Warning! Before installing, read the instruction carefully for your safety and correct operation of the appliance.

- This appliance performs well within the Ambient temperature from 55 deg F / 12.8°C to 110 deg F / 43.3°C. It may not work properly if being left at a temperature above or below the indicated range for a long period.
- Stand your appliance in a dry place to avoid high moisture.
- Keep the appliance out of direct sunlight rain or frost. Stand the appliance away from heat sources such as stoves, fires or heaters.


Installing the rubber anti-tip pad

- If there is a rubber anti-tip pad and a screw provided in a plastic bag with your appliance, you must install these accessories according to the following procedure.
- Note:
There is no need to install these accessories under normal usage. Only under the extreme circumstance, cabinet empty while load on door with local mass of 10 kg / 22 pounds and opening the door about 90 degree, this refrigerator may take risk of tipping. Then anti-tip should be fastened to the lower base cover to steady this appliance.


1. Tilt appliance to find screw hole on the left of lower base cover.

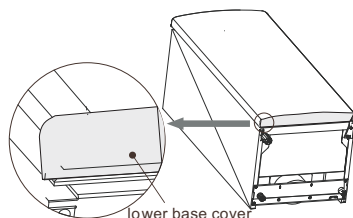

2. Put screw into the hole of rubber supporting pad.

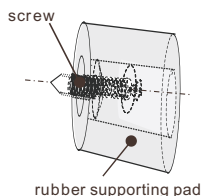

3. Make screw in alignment with the hole on lower base cover. Fasten rubber supporting pad to the base cover firmly by a phillips screw driver (not included).

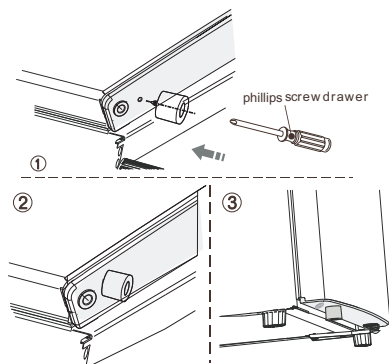

Leveling


- The appliance should be level in order to eliminate vibration. To make the appliance level, it should be upright and both adjusters should be in firm contact with the floor. You can adjust the level by screwing in or out to the appropriate level from the front (use your fingers or a suitable spanner).

Electrical connection

Caution! Any electrical work required to install this appliance should be carried out by a qualified or competent person.

Warning! This appliance must be grounded. The manufacture declines any liability should these safety measures not be observe.

Description of the appliance

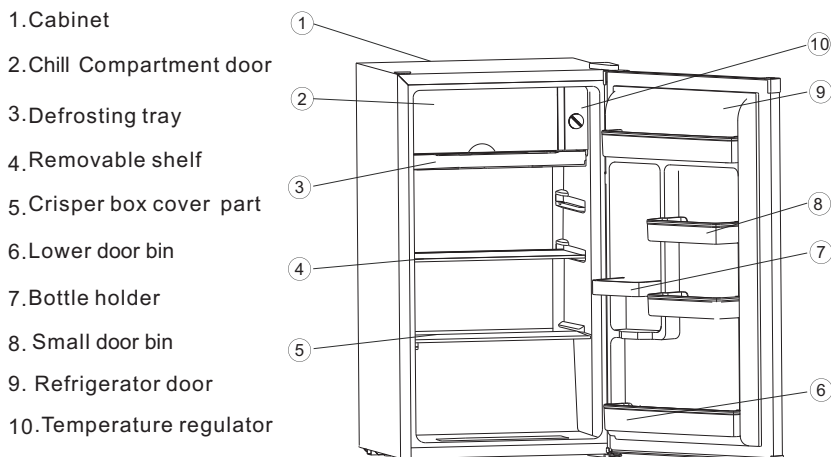

Note: Due to continual modification of our products, your refrigerator may be slightly different from this instruction Manual, but its functions and usage methods remain the same.

Operation

CAUTION: Wait for 4 hours with the unit upright, before connecting the appliance to allow the refrigerant to flow back into the compressor.

Starting up and temperature regulation

Insert the plug into the electrical outlet with earth ground. The temperature selector knob is located on the side of the chiller compartment.

Setting "0" means no cooling

Turning the temperature control to "0" position stops the cooling cycle, but does not shut off the power to the refrigerator.

Turning clockwise in direction turns the cooling cycle on. If the unit is unplugged, power lost, or turned off, you must wait 3 to 5 minutes before restarting the unit. If you attempt to restart before this time delay, the refrigerator will not start.

Setting "8"(end-stop)

Setting "8" is the coolest possible temperature setting.

Important!

Normally we advise you select setting of 3 or 4, if you want the temperature warmer or colder please turn the knob to lower or higher setting accordingly.

Raising the temperature setting can lead to the more energy efficiency. As the temperature setting is decreased, it's likely that more energy will be consumed.

Important!

High ambient temperatures (e.g. on hot summer days) and a colder setting (position 6 to 8) on the temperature regulator can cause the compressor to run continuously or even non-stop!

Reason: when the ambient temperature is high, the compressor must run continuously to maintain the low temperature in the appliance.




Warning: For safe food preservation, a temperature of 39 deg F or less must be maintained in the refrigerator

Remove and install the door shelf


Warning: The door shelf must not be removed and installed by the user! If the door shelf is damaged, contact the customer helpline for assistance. To replace the door shelf, the below steps can be followed:

Remove the door shelf

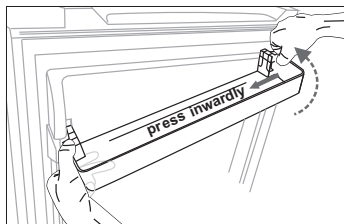

Press the right side of the door shelf inwardly, while holding the left side. When the notch of the shelf has been detached from the refrigerator door, remove the rack obliquely upwardly.

Install the door shelf

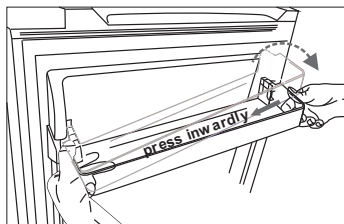

Firstly tilt the left side of the door shelf, and make sure the notch has been fastened to the door. Then press the right side inwardly, pushing it down into place.

Using your appliance


Your appliance has the features shown below, which are described in the "Description" section of this manual. Please note these usage tips and instructions.

Door bins

- Suitable for the storage of canned liquid, bottled drinks and packaged food, etc. Do not place too many heavy things in the bins.

Shelf in Refrigerator compartment

- There are shelves in the refrigerator compartment and they can be taken out to be cleaned.

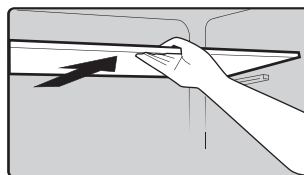

Chiller compartment

- This is a low temperature compartment intended specifically for the temporary storage of frozen items.

Helpful hints and tips

Energy saving tips

We recommend that you follow the tips below to save energy.

- Try to avoid keeping the door open for long periods in order to conserve energy.
- Ensure the appliance is away from any sources of heat (Direct sunlight, electric oven or cooker etc).
- Don't set the temperature colder than necessary.
- Don't store warm food or evaporating liquid in the appliance.
- Place the appliance in a well ventilated, humidity free, room. Please refer to the instructions on installing your new appliance.
- The diagram shows the correct combination for the shelves, designed to be the most energy efficient configuration.

Hints for fresh food refrigeration

- Do not place hot food directly into the refrigerator or Chiller compartment, as the internal temperature will increase resulting in the compressor having to work harder and will consume more energy.
- Cover or wrap the food particularly if it has a strong flavor.
- Place food properly so that air can circulate freely around it.

Hints for refrigeration

- Meat (All Types) Wrap-ped in PVDC (plastic) wrap:
Wrap and place on the shelf. Always follow food storage times and use by dates suggested by manufacturers.
- Cooked food, cold dishes, etc.:
Dishes should be covered and may be placed on any shelf.
- Fruit and vegetables:
Fruit and vegetables should be wrapped and stored under the Crisper box cover part.
- Butter and cheese:
Be wrap in airtight foil or plastic film wrap.
- Milk bottles:
Bottles should have a lid and be stored in the door racks.

Hints for the storage of frozen food

- Only store frozen items temporarily in the Chiller compartment. This compartment is not intended for freezing, or long term storage of frozen items.
- Once defrosted, food will deteriorate rapidly and should not be re-frozen. Do not exceed the storage period indicated by the food manufacturer.

Switching off your appliance

If the appliance needs to be switched off for an extended period, the following steps should be taken prevent mould on the appliance.

1. Remove all food.
2. Remove the plug from the electrical outlet.
3. Clean and dry the interior thoroughly.
4. Ensure that all the doors are wedged open slightly to allow air to circulate.

Cleaning and care

Cleaning and Care

The appliance interior, including interior accessories, should be cleaned regularly.

The refrigerator should be cleaned and maintained at least every two months.



Warning! Danger of electrical shock!

- The appliance should not be connected to the power supply during cleaning. Before cleaning, switch the appliance off and remove the plug from the electrical outlet, or switch off or turn out the circuit circuit breaker or fuse.

Important!

- Remove the food from the appliance before cleaning. Store in a cool place, well covered.
- Never clean the appliance with a steam cleaner. Moisture could accumulate in electrical components,
- Hot vapors can lead to the damage of plastic parts.
- Ethereal oils and organic solvents can attack plastic parts, e.g. lemon juice or the juice from orange peel, butyric acid, cleanser that contain acetic acid. Do not allow such substances to come into contact with appliance parts.
- Do not use any abrasive cleansers.
- Clean the appliance and the interior accessories with a cloth and lukewarm water. Commercially available dish washing detergents may also be used.
- After cleaning wipe with fresh water and clean dish cloth.
- After everything is dry place appliance back into service.

Defrosting

Why defrosting

- A frost layer may form inside the refrigerator after continuous usage. If the frost is more than 10mm (3/8 inches) thick, you should defrost.

Defrosting

- Defrosting is operated manually. Before defrosting, take the food out; take the ice tray out or put it into the refrigerator chamber temporarily, then set the knob of the temperature regulator to position "0" (where the compressor will stop working), leave the door of the refrigerator open until ice and frost dissolves thoroughly, and accumulates in the drip tray. Wipe off the water with soft cloth. To speed up the process of defrosting, you may put a bowl of warm water (about 50 deg C / 120 deg F) into the Chiller compartment, and scrape away the ice and frost with a defrosting spatula. After doing so, be sure to set the knob of the temperature regulator to the original position. It is not advisable to heat the Chiller compartment directly with hot water or a hair dryer while defrosting to avoid deformation of the inner case. It is also not advisable to scrape off ice and frost or separate food from the containers which have been congealed together with the food with sharp tools or wooden bars, so as not to damage the inner casing.

● Warning!

You need to lift the defrosting tray before you remove it.

Reversing the door

The side at which the door opens can be changed from the right side (as supplied) to the left side, if the installation site requires.

Tools you will need:

1. 8mm socket driver.



2. Phillips screwdriver.




3. Putty knife or thin-blade screwdriver.





Before you start, lay the refrigerator on its back in order to gain access to the base. You should rest it on soft foam packaging or similar material to avoid damaging the cooling pipes at the rear of the refrigerator.

1. Remove the upper hinge core, transfer it to left side and tighten securely, then put the screw covers in a safe place.

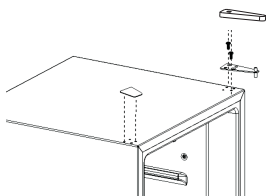

2. Remove both adjustable feet, the bottom hinge bracket and the rubber supporting pad by unscrewing the bolts. Then re-attach them according to the following pictures.

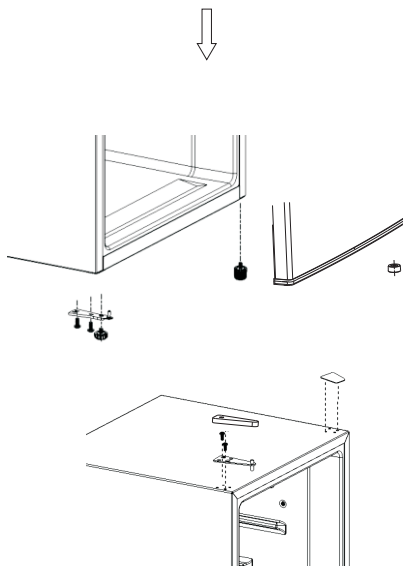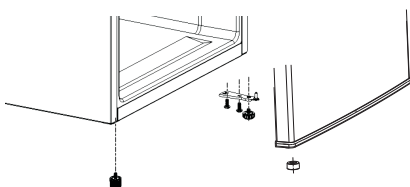

3. Replace the door by fitting the upper hinge core into the upper door's hole, securing it with the 2 screws. Replace the screw covers.

Warning!

When changing the side at which the door opens, the appliance must not be connected to electrical power. Remove plug from the power outlet beforehand.

Troubleshooting

If you experience a problem with your appliance or are concerned that the appliance is not functioning correctly, you can carry out some easy checks before calling Hisense Customer Service per below.

Warning! Don't try to repair the appliance yourself. If the problem persists after you have made the checks mentioned below, contact an authorized Hisense servicer.

Problem	Possible cause	Solution
Appliance does not work.	Appliance is not switched on.	Switch on the appliance.
	Electrical plug is not plugged in or is loose.	Insert electrical plug.
	Fuse has blown or is defective.	Check fuse, replace if necessary.
	Socket is defective.	Must be corrected by an electrician.
The food is too warm.	Temperature is not properly adjusted.	Please look in the "initial Start Up" section.
	Door was open for an extended period.	Open the door only as long as necessary.
	A large quantity of warm food was placed in the appliance within the last 24 hours.	Turn the temperature regulation to a colder setting temporarily.
	The appliance is near a heat source.	Please look in the "installation location" section.
Heavy build-up of frost, possibly also on the door seal.	Door seal is not air-tight (possibly after reversing the door).	Carefully warm the leaking sections of the door seal with a hair dryer (on a cool setting). At the same time shape the warmed, adjust the door seal by hand such that it sits correctly.
Unusual noises.	Appliance is not level.	Readjust the feet.
	The appliance is touching the wall or other objects.	Move the appliance slightly.
	A component, e.g. a pipe, on the rear of the appliance is touching another part of the appliance or the wall.	If necessary, carefully bend the component out of the way.
The compressor does not start immediately after changing the temperature setting.	This is normal, no error has occurred.	The compressor starts after a period of time.
Water on the floor or storage shelves.	Check that the Drip tray is housed properly. Drip tray is full of water.	See the "cleaning and care" section.

Disposal of the appliance

It is prohibited to dispose of this appliance as household waste.

Dispose of this appliance in accordance with Federal and Local regulations. Refrigerants must be evacuated before disposal.

Before disposal of the appliance

1. Pull out the electrical plug from the mains socket.
2. Cut off the power cord and discard together with the electrical plug.

Warning! Refrigerators contain refrigerant and gases in the insulation. Refrigerant and gases must be disposed of professionally as they may cause eye injuries or ignition. Ensure that tubing of the refrigerant circuit is not damaged prior to proper disposal.

	Correct Disposal of this product
	This symbol on the product or in its packing indicates that this product may not be treated as household waste. Instead, it should be taken to the appropriate waste collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by the inappropriate waste handling of this product. For more detailed information about the recycling of this product, please contact your local council your household waste disposal service, or the shop where you purchased the product.

LIMITED WARRANTY FOR HISENSETM

REFRIGERATORS, FREEZERS AND WINE COOLERS

Congratulations on your purchase!

IMPORTANT: Just in case your newly purchased Refrigerator, Freezer or Wine Cooler needs to be serviced, please keep the original packaging materials and original receipt.

Hisense USA Corporation ("Hisense"), hereby warrants to the first end user consumer purchaser ("Purchaser") for this HisenseTM Refrigerator, Freezer or Wine Cooler ("**Product**"), when shipped in its original container and sold or distributed in the United States and Puerto Rico by an authorized Hisense dealer, and provided that this Product was not sold either "as is", "with all faults", "sales final" or per similar terms, that this Product will, during the applicable warranty period as stated solely in this Limited Warranty, be free from defects in material and workmanship. Hisense will, solely within the applicable warranty period, and at Hisense's sole discretion, either repair the defective Product or provide the Purchaser with a **like new or refurbished product of similar or better quality**.

HOW TO GET WARRANTY SERVICE:

Warranty service may be obtained by contacting Hisense using any of the methods below. Proof of purchase in the form of an original bill of sale or receipted invoice with a legible date of purchase that evidences the Product is within the applicable warranty period must be presented to Hisense in order to obtain warranty service. Our contact information is provided below. Hisense will respond to warranty requests within a commercially reasonable time.

Warranty Service and Troubleshooting Information for Customers in the United States and Puerto Rico

To obtain warranty service and troubleshooting information, contact the
Hisense Consumer Care Center.

Call 1-877-465-3566 (Monday–Friday from 9 a.m. - 9 p.m. EST,
Saturday–Sunday from 9 a.m. - 6 p.m.) or

Email service@hisense-usa.com or visit our website www.hisense-usa.com.

ON-SITE SERVICE:

Certain Products, as stated herein, are eligible for on-site service at Hisense's sole discretion. To obtain on-site service, Purchaser must call or email Hisense as described above to trouble-shoot the issue with the Product. On-site service may not be available in certain locations where an authorized service provider is not available. An authorized service provider is considered unavailable if the Purchaser's location exceeds fifty (50) miles from the service provider's business address. In the event that on-site service is not available, Hisense will, at its sole discretion, replace the Product with a new or refurbished

similar Product of equal or greater value, or refund the purchase price of the Product to the Purchaser.

On-site service requires that our authorized service provider be given clear, complete, unobstructed and easy access to the front, sides and rear of the Product. On-site service does not include that the service provider removes, reinstalls or transports the Product. It is possible that certain on-site repairs will need to be completed off site, and at Hisense's discretion, require that the Product to be shipped directly to Hisense's authorized service center. Once Hisense receives the Product and repairs or replaces it, Hisense will return the repaired/replaced Product back to the Purchaser.

TERMS AND CONDITIONS:

This limited warranty shall not apply to:

- (a) Any defects caused or repairs required as a result of: abusive operation; negligence; accident; shipment damages; improper delivery and installation; installation not in accordance with electrical or plumbing codes; leaky, broken, frozen pipes or restricted drains; inadequate air supply; damages caused by improper packaging by Purchaser; application and use for which this Product was not intended as set forth in the user's manual or other applicable Product documentation.
- (b) Any defects caused or repairs required as a result of any Product that has been tampered with, modified, adjusted or repaired by any person other than Hisense, a Hisense authorized service provider or a Hisense authorized service center or dealer.
- (c) Any replacement of accessories, handles, glassware, shelving, racking, trays, consumable or peripheral items required through normal use of the Product, including but not limited to, batteries, filters, bulbs, fuses, etc.
- (d) Any cosmetic damage to the Product surface or exterior, including but not limited to that which has been defaced or caused through normal wear and tear, improper shipping and handling or the use of chemical cleaning agents.
- (e) Any defects caused or repairs required as a result of damage caused by any external or environmental conditions, including but not limited to, use of incorrect voltage, fluctuations or surges in transmission line/power line/generator voltage, liquid spillage, or acts of nature or of God.
- (f) Warranty claims for Products returned with altered, illegible or missing model, factory serial number and UL markings.
- (g) Any Products used for rental, business or commercial purposes.
- (h) Any installation, consumer instruction, delivery, setup, adjustment, and/or programming charges.
- (i) A Product that is not installed in accordance with installation instructions included with the Product.
- (j) Any third-party accessories or add-on's.
- (k) Food or drink losses due to any sealed system failures.

No other entity other than Hisense is authorized to extend, enlarge or transfer this warranty on behalf of Hisense.

The express warranties in this limited warranty are, in lieu of and, except to the extent prohibited by applicable law, Hisense disclaims all other warranties and conditions, express or implied, whether arising by law, statute, by course of dealing or usage of trade, including, without limitation, implied warranties or

conditions of merchantability and/or quality, fitness for a particular use or purpose, and/or non-infringement. Hisense does not warrant uninterrupted or error-free operation of this Product.

Limitations: (a) Hisense shall not be liable for any incidental, special, consequential, economic, exemplary or indirect damages of any kind or nature (including lost profits or damages for loss of time or loss of use or loss of data) arising from or in any connection with the use or performance of a Product or a failure of a Product, even if Hisense is aware of or has been advised of the possibility of such damages; (b) the remedies described in this limited warranty constitute complete fulfillment of all obligations and responsibilities of Hisense to the Purchaser with respect to the Product and shall constitute full satisfaction of all claims, whether based in contract, negligence, strict liability or otherwise. Some States do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

WARRANTY PERIODS:

All warranty periods shall be calculated from the date of original purchase by the Purchaser.

- **Compact Refrigerators (6.5 cu. ft. or less):** One (1) **year** for parts and labor (replacement Product and parts assume the remaining original warranty period, or ninety (90) days, whichever is longer).
NOT ELIGIBLE FOR ON-SITE SERVICE.
- **Refrigerators (over 6.5 cu. ft.):**
 - **One (1) year** for parts and labor (replacement Product and parts assume the remaining original warranty period, or ninety (90) days, whichever is longer).
 - **Five (5) years** for parts and labor on the sealed system (i.e. compressor, evaporator, condenser, drier, connecting tubing) only. All other parts and labor are excluded from this five (5) year warranty.
 - **ONLY REFRIGERATORS WITH A STATED INTERNAL CAPACITY OVER 12.0 CUBIC FEET ARE ELIGIBLE FOR ON-SITE SERVICE.**
- **Chest Freezers (over 5 cu. ft.):**
 - **One (1) year** for parts and labor (replacement Product and parts assume the remaining original warranty period, or ninety (90) days, whichever is longer).
 - **Five (5) years** for parts and labor on the sealed system (i.e. compressor, evaporator, condenser, drier, connecting tubing) only. All other parts and labor are excluded from this five (5) year warranty.
 - **CHEST FREEZERS ARE NOT ELIGIBLE FOR ON-SITE SERVICE.**
- **Wine Coolers:**
 - **Two (2) years** for parts and labor (replacement Product and parts assume the remaining original warranty period, or ninety (90) days, whichever is longer).
 - **Five (5) years** for parts and labor on the sealed system (i.e. compressor, evaporator, condenser, drier, connecting tubing) only. All other parts and labor are excluded from this five (5) year warranty.
 - **ONLY WINE COOLERS WHICH HAVE BEEN BUILT-IN OR INSTALLED IN AN UNDER-COUNTER APPLICATION WILL BE CONSIDERED FOR ON-SITE SERVICE. "BUILT-IN" MEANS INSTALLED IN SUCH A MANNER AS TO BE**

CONSIDERED HAVING BEEN ATTACHED IN A PERMANENT OR SEMI-PERMANENT MANNER TO THE PURCHASER'S HOME.

- **Accessories**: Ninety (90) days for parts and labor.

This Warranty is only valid in the United States and Puerto Rico and only applies to Products sold/distributed and serviced in the United States and Puerto Rico.

NO WARRANTIES (WHETHER EXPRESS OR IMPLIED) INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE SHALL APPLY AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE, AND NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN (BY ANY PERSON, FIRM OR ENTITY WITH RESPECT TO THE PRODUCT) SHALL BE BINDING ON HISENSE. THIS WARRANTY IS THE EXCLUSIVE WARRANTY WITH RESPECT TO THE PRODUCT AND HISENSE IS THE EXCLUSIVE WARRANTY PROVIDER FOR THE PRODUCT. REPAIR OR REPLACEMENT IS THE EXCLUSIVE REMEDY OF THE CONSUMER. HISENSE SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE PRODUCT. NOTWITHSTANDING THE FOREGOING, CONSUMER'S RECOVERY AGAINST HISENSE SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY HISENSE. THIS WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL END USER CONSUMER PURCHASER OF THE PRODUCT AND IS NOT TRANSFERABLE.

Some States do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages or allow limitations on warranties; therefore, the limitations or exclusions stated above may not apply to Purchaser, solely within those specific States. This warranty gives you specific legal rights, and you also may have other rights which vary from State to State. This warranty applies to the maximum extent not prohibited by law.

CUSTOMER RECORD

Please fill and retain for your records, along with proof of original purchase.

You do not need to send us this warranty card to receive warranty service.

Date of Purchase: Store/Dealer:

Model No.: Serial No.:

Hisense

life reimagined

MANUAL DE INSTRUCCIONES

Antes de poner en marcha la unidad, lea atentamente el manual y consérvelo para referencia futura.

RR33D6ABE

Español

Tabla de Contenido

Introducción General.....	2	Sugerencias y consejos de ayuda.....	9
Instrucciones importantes de seguridad...	2	Limpieza y cuidado.....	10
Primer uso e instalación.....	5	Inversión de la puerta.....	11
Descripción del electrodoméstico.....	7	Solución de problemas.....	12
Funcionamiento.....	7	Eliminación del electrodoméstico.....	13

Introducción General

Gracias por seleccionar nuestros productos. Estamos seguros de que usted encontrará su nuevo aparato como un placer de usar. Antes de utilizar el aparato, recomendamos que lea detenidamente estas instrucciones, que proporcionan los detalles sobre su uso y funciones.

- Por favor asegúrese de que todas las personas que utilizan este aparato estén familiarizadas con sus operaciones y funciones de seguridad. Es importante que instale el aparato correctamente y preste atención a las instrucciones de seguridad cuidadosamente.

- Recomendamos que preserve este manual de usuario con el aparato para la referencia futura y consérvelo para los usuarios futuros.

- Si siente que el electrodoméstico no está funcionando adecuadamente, por favor vea la página de Resolución de problemas para obtener ayuda. Si aún tiene dudas, póngase en contacto con la línea de ayuda de atención al cliente para obtener asistencia o para programar una visita a domicilio de un ingeniero de servicio autorizado.

Instrucciones importantes de seguridad

Seguridad General y Uso Diario



Es importante utilizar su aparato de manera segura.

Recomendamos que siga los consejos siguientes

- Preserve los alimentos de acuerdo con las instrucciones de almacenamiento desde el fabricante.
- No trate de hacer usted mismo la reparación del electrodoméstico. Es peligroso alterar las especificaciones o modificar este electrodoméstico de alguna manera. Cualquier daño al cable

puede causar cortocircuitos, incendios o descargas eléctricas.

- No coloque las cosas calientes cerca de los componentes de plástico de este aparato
- Los alimentos congelados no deberán ser re-congelados después de su descongelación.
- No almacene las bebidas embotelladas o enlatadas (especialmente las bebidas carbonatadas) en el compartimiento del

congelador. Las botellas y latas pueden explotar.

- Para evitar la caída de objetos y causar lesiones o daños al aparato, no sobrecargue los estantes de la puerta ni coloque demasiados alimentos en los estantes.

ADVERTENCIA- No utilice dispositivos mecánicos u otros medios para acelerar el proceso de descongelación a menos que estén aprobados por el fabricante.

ADVERTENCIA- No dañe el circuito refrigerante.

ADVERTENCIA- Si el cable de alimentación está dañado, lo debe reemplazar el fabricante, el agente de servicio o una persona similar calificada para evitar peligros.

ADVERTENCIA- Mantenga las aberturas de ventilación en el gabinete del electrodoméstico, o en la estructura integrada, libre de obstrucciones.

ADVERTENCIA- Cuando se deshaga del electrodoméstico, hágalo sólo en el centro de desperdicios autorizado. No lo exponga al fuego.

ADVERTENCIA- No almacene explosivos o sustancias como latas de aerosol con carburante inflamable en el electrodoméstico.

Seguridad para niños y las personas débiles



Este aparato no está diseñado para ser utilizado por las personas

(incluyendo los niños) con discapacidades físicas, sensoriales o mentales, o la falta de experiencia y conocimiento, a menos que sea supervisadas o instruidas acerca del uso del aparato por una persona

responsable de su seguridad. Los niños deberán ser supervisados para asegurar que no jueguen con el aparato.

- Mantenga todos los envases apartados de los niños para evitar el riesgo de asfixia.

- Proteja a los niños contra la quemadura mediante el toque del compresor muy caliente en el fondo trasero de la espalda.

- No coloque los objetos en la parte superior del aparato ya que eso puede causar lesión personal si se caen.

- Nunca permita que los niños jueguen con el aparato suspendiéndose o manteniéndose de pie sobre o en las puertas, estantes, bastidores o estantes, etc.

ADVERTENCIA- Quite las puertas. Deje todos los estantes en el lugar para que los niños no trepen fácilmente.

Seguridad Eléctrica



Para evitar los riesgos que están siempre presentes cuando utiliza un aparato

eléctrico, recomendamos que preste más atención a las instrucciones sobre electricidad a continuación.

- Desembale el aparato y verifíquelo completamente. Si existen algunos daños evidentes, no enchufe el aparato sino póngase en contacto inmediato con la tienda desde donde lo compró.

Preserve todos los materiales de embalaje en este caso.

- Recomendamos que espere durante 4 horas antes de conectar el aparato a la electricidad con el fin de permitir que el refrigerante regrese al compresor.

- El aparato deberá ser enchufado en la

corriente alterna monofásica de 115V/60HZ.

- El enchufe principal deberá ser accesible cuando el aparato está instalado.
- El electrodoméstico debe estar a tierra, no utilice adaptadores subterráneos (dos patas).
- Este electrodoméstico está equipado con un enchufe a tierra según los estándares locales. El enchufe a tierra debería ser adecuado para utilizarse en todas las casas equipadas con toma corrientes según las especificaciones vigentes. Si la salida no es adecuada para enchufes a tierra, NO corte la conexión a tierra. En su lugar, contacte a un electricista calificado y matriculado para instalar la salida correcta. No utilice extensiones de cables o enchufes múltiples que podrían causar una sobrecarga en los circuitos del cableado y podrían causar incendios.
- Siempre enchufe su aparato en su propio tomacorriente eléctrico individual que tiene un nivel de voltaje que coincide con la placa de identificaciones.
- Asegúrese de que el enchufe no esté roto o dañado; puede sobrecalentar, causar un cortocircuito, descarga eléctrica incluso un incendio.
- No inserte el enchufe de conexión a la red ni use el aparato si el tomacorriente está roto. Existe un riesgo de descarga eléctrica o incendio.
- Apague el aparato y desconéctelo de la fuente de alimentación antes de limpiarlo o moverlo.
- Nunca desenchufe el aparato tirando el cable de alimentación. Siempre agarre el enchufe firmemente y tírelo

rectamente desde el tomacorriente para evitar dañar el cable de alimentación.

- Todos los componentes eléctricos deberán ser reemplazados o reparados por un electricista cualificado o un ingeniero de servicio autorizado. Sólo se deberá utilizar los repuestos genuinos.

ADVERTENCIA -No utilice electrodomésticos eléctricos dentro del compartimiento de almacenamiento de alimentos del electrodoméstico, a menos que estén aprobados por el fabricante.

El refrigerante y riesgos de incendio



El electrodoméstico contiene una cantidad pequeña de refrigerante (R600a) en el

circuito del refrigerante. Verifique la etiqueta del compresor detrás del electrodoméstico para ver el refrigerante que utiliza el electrodoméstico.

- Si el electrodoméstico contiene refrigerante isobutano (R600a), que es ecológico pero inflamable, asegure que la tubería del circuito del refrigerante no se dañe durante la transportación e instalación para evitar riesgos de incendios ocasionados por la fuga de refrigerante.
- Mantenga las velas encendidas, lámparas y otros artículos con llamas y fuentes de incendio lejos del electrodoméstico y ventile a fondo la habitación para evitar riesgos de incendios o daños en los ojos en caso de una fuga del refrigerante (R600a).
- No almacene productos que contengan propelentes inflamables (ej.: latas de spray o sustancias explosivas) en el electrodoméstico.

Proposición 65 de California Advertencias:

ADVERTENCIA: Este producto contiene una o más sustancias químicas que, conforme al estado de California, producen cáncer.

ADVERTENCIA: Este producto contiene una o más sustancias químicas que, conforme al estado de California, causan defectos de nacimiento u otros daños reproductivos.

Primer uso e instalación


La limpieza antes del uso

● Antes de utilizar el electrodoméstico por primera vez, lave el interior y todos los accesorios internos con agua tibia y jabón neutro para quitar el típico olor a producto nuevo; luego, seque completamente.

¡Importante! No utilice detergentes ni polvos abrasivos ya que pueden dañar el acabado.

¡Importante! Es necesario tener una buena ventilación alrededor del refrigerador para permitir la disipación del calor, una alta eficiencia y bajo consumo de energía. Por esta razón, debería haber un espacio lo suficientemente libre cerca del refrigerador. Se aconseja que haya 75mm de separación de la parte trasera del refrigerador a la pared, al menos 100mm de espacio en ambos lados, una altura de 100mm desde la parte superior y un espacio libre al frente para que las puertas se puedan abrir a 180°.

El electrodoméstico no debe ser expuesto a la lluvia. Se debe permitir que circule suficiente aire en la sección inferior trasera del electrodoméstico ya que la poca circulación de aire puede afectar el funcionamiento. Los electrodomésticos integrados se deben colocar lejos de fuentes de calor como calentadores y luz directa del sol.

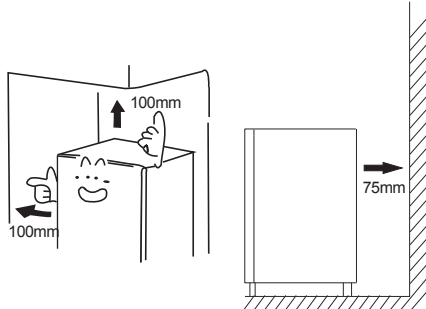

Posición de instalación



¡Advertencia! Antes de realizar la instalación y para su seguridad y funcionamiento correcto del electrodoméstico, lea cuidadosamente las instrucciones.

● Este electrodoméstico funciona bien dentro de la temperatura ambiental desde 55° F/ 12.8°C hasta 110° F/ 43.3°C.

Puede que no funcione de manera correcta si la temperatura está por encima o debajo del rango indicado durante un largo período.

● Mantenga el aparato en un lugar seco para evitar alta humedad.

● Mantenga el aparato lejos de la luz directa del sol, la lluvia o las heladas. Coloque el aparato lejos de fuentes calientes como cocinas, estufas o calentadores.

Instalación de la almohadilla de goma

de apoyo


● Si en la bolsa de plástico de su electrodoméstico hay una almohadilla de goma de apoyo y un tornillo, usted puede instalar estos accesorios según el siguiente procedimiento.

● **Nota:**


No se necesita instalar estos accesorios para el uso normal.

Sólo bajo circunstancias extremas, el refrigerador puede volcarse si el gabinete se encuentra vacío mientras que la carga en la puerta es de un total de 10 kg y la apertura de la puerta es de 90 grados. Luego se debe ajustar la almohadilla de goma de apoyo en la cubierta de la base inferior para estabilizar el electrodoméstico.

1. Inclíne el electrodoméstico para encontrar el orificio del tornillo sobre la parte izquierda de la cubierta de la base inferior.

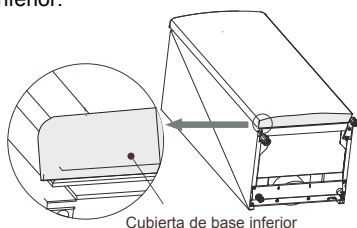


2. Coloque el tornillo en el orificio de la almohadilla de goma de apoyo.

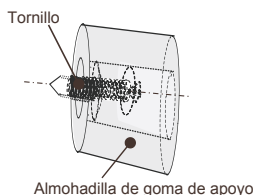

3. Alinee el tornillo con el orificio en la

cubierta de la base inferior. Ajuste la almohadilla a la cubierta de manera firme con un destornillador de estrella (auto proporcionado).

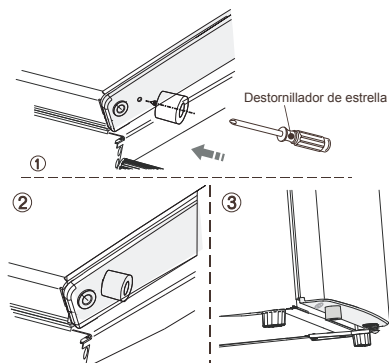

Nivelación

● El electrodoméstico se debe nivelar para eliminar vibraciones. Para nivelar el electrodoméstico, debería estar derecho y ambos ajustadores deberían estar firmemente en contacto con el piso. También, puede ajustar el nivel al desatornillar el ajustador delantero (puede utilizar los dedos o una llave adecuada).


Conexión eléctrica

¡Precaución! Cualquier trabajo eléctrico requerido para instalar este electrodoméstico debería ser realizado por una persona calificada o competente.

¡Advertencia! Este electrodoméstico debe estar conectado a tierra. El fabricante rechaza cualquier responsabilidad en caso de que no se sigan estas medidas de seguridad.

Descripción del electrodoméstico

1. Gabinete
2. Puerta del compartimiento del congelador
3. Bandeja de descongelación
4. Estante desmontable
5. Cobertor del cajón *Crisper*
6. Estante inferior
7. Soporte para botellas
8. Estante chico
9. Puerta del refrigerador
10. Regulador de temperatura

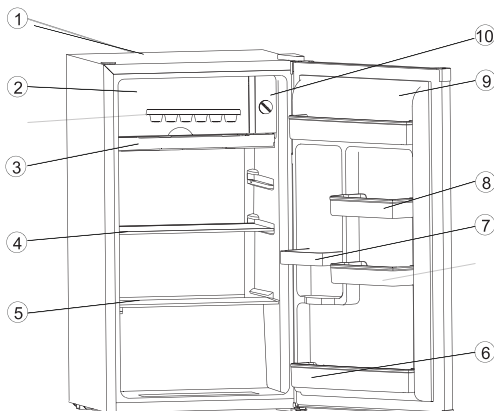

Nota: Debido a las continuas modificaciones de nuestros productos, el refrigerador puede diferir un poco en este manual de instrucciones pero su funcionamiento y métodos de usos son los mismos.

Funcionamiento

Arranque y regulación de la temperatura

Inserte el enchufe del cable de conexión en el toma corrientes con protección de conexión a tierra. La perilla seleccionadora de temperatura está ubicada a un lado del compartimiento del congelador.

Configuración "0" significa

Llevar la temperatura de control a la posición "0" detiene el ciclo de enfriamiento pero no corta la electricidad del refrigerador.

Llevarla hacia la derecha enciende el refrigerador, luego, funciona automáticamente. Si la unidad está desenchufada, no hay energía o está

apagada, debe esperar de 3 a 5 minutos antes de reiniciar la unidad. Si intenta reiniciar antes de este tiempo, el refrigerador no encenderá.

Configuración "8" (posición final) significa:

Temperatura más baja, configuración más fría.

¡Importante!

Normalmente, le aconsejamos que seleccione la configuración 3 ó 4. Si desea la temperatura más cálida o más fría, coloque la perilla a una configuración más baja o más alta. Cuando gira la perilla a más bajo puede producir más eficiencia energética. De lo contrario, puede causar mucho consumo

de energía.

¡Importante!


La temperatura ambiente alta (ej.: en días calurosos de verano) y la configuración fría (posición de 6 a 8) en el regulador de temperatura pueden causar que el compresor funcione continuamente o que ¡nunca pare!

Razón: cuando la temperatura ambiente es alta, el compresor debe funcionar continuamente para mantener la baja temperatura del electrodoméstico.




Extracción e instalación del estante de la puerta

Advertencia: ¡El estante de la puerta no se puede extraer ni instalar por el usuario! Si se daña el estante de la puerta, contacte a la línea de ayuda al cliente para una asistencia. Para reemplazar el estante de la puerta se deben seguir los siguientes pasos: Extracción del estante de la puerta

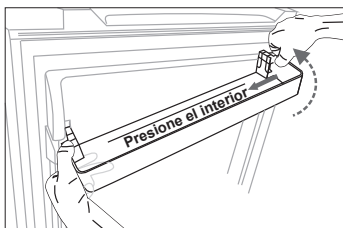

Presione el lado derecho del estante de la puerta mientras sostiene el lado izquierdo. Cuando la ranura del estante se separa de la puerta del refrigerador, quite el estante de manera oblicua y hacia arriba.

Instalación del estante de la puerta

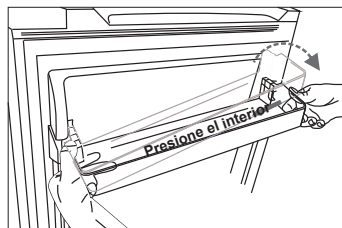

Primero, incline el lado izquierdo del estante de la puerta y asegúrese de que la ranura se haya sujetada a la puerta. Luego, presione el lado derecho interno y empujelo hasta su lugar.

Utilización del electrodoméstico


Su electrodoméstico cuenta con accesorios como los que se muestran en "Descripción del electrodoméstico". Con este instructivo puede utilizarlos de la manera correcta.

Estante de la puerta

- Es ideal para almacenar huevos, líquidos en lata, botellas, alimentos envasados, etc. No coloque demasiadas cosas pesadas en el estante.

Estante en el refrigerador

- Hay estantes en el refrigerador y se pueden sacar para poder limpiarlos.

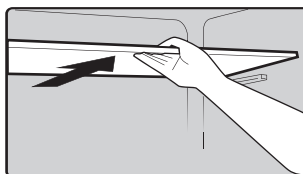

Compartimiento del congelador

- Es un compartimento de baja temperatura destinada específicamente para el congelamiento y almacenamiento de hielo. Puedo hacer 250 gr de hielo en 24 horas.

Sugerencias y consejos de ayuda

Consejos para el ahorro de energía

Le recomendamos que siga los siguientes consejos para ahorrar la energía.

- Trate de evitar tener la puerta abierta por largos períodos para conservar la energía.
- Compruebe que el electrodoméstico esté lejos de fuentes de calor (Luz directa del sol, horno eléctrico o cocinas, etc.)
- No ajuste la temperatura a más frío de lo que sea necesario.
- No almacene comida caliente o líquidos que se evaporan en el electrodoméstico.

Coloque el electrodoméstico en un área bien ventilada y libre de humedad. Vea el capítulo de "Instalación del nuevo electrodoméstico".

- El diagrama muestra la combinación correcta de estantes, diseñada para una configuración eficiente de energía.

Sugerencias para la refrigeración de alimentos frescos

- No coloque comida caliente directamente en el refrigerador o en el congelador ya que la temperatura interna incrementará y el compresor tendrá que trabajar más y consumirá más energía.
- Cubra o envuelva la comida si tiene sabor fuerte.
- Coloque la comida de manera correcta para que el aire circule libremente.

Sugerencias para la refrigeración

- Carne (de cualquier tipo) envuelta en film: envuelva y almacene la carne en el

estante. Siempre siga la fecha de los alimentos almacenados sugeridos por el fabricante.

- Alimentos cocidos, platos fríos, etc.: Se deben cubrir y colocar en cualquier estante.
- Frutas y verduras: Se deben envasar y almacenar en el cajón *crisper*

- Manteca y queso: Deberían envasarse en film plástico o papel hermético.

- Botellas de leche: Deberían tener una tapa y almacenarse en los estantes de la puerta.

Sugerencias para congelar

- Cuando se encienda por primera vez o después de un período sin uso, deje que el electrodoméstico funcione 2 horas con los ajustes más altos antes de colocar los alimentos en el compartimiento.

- Prepare la comida en pequeñas porciones para dejar que se congele rápida y completamente y para descongelar posteriormente sólo la cantidad que se requiera.

- Envuelva la comida en papel aluminio o polietileno hermético.

- No deje que la comida fresca y sin congelar toque la comida que ya está congelada para evitar que la temperatura de este último aumente.

- Se recomienda etiquetar y colocar la fecha de cada paquete congelado para mantener un seguimiento del tiempo de almacenamiento.

Sugerencias para almacenar la comida congelada

- Asegúrese de que los alimentos congelados sean almacenados correctamente por la cadena de alimentos.
- Una vez descongelados, los alimentos se deteriorarán rápidamente y no se deben congelar otra vez. No exceda el período de almacenamiento indicado por el fabricante de alimentos.

Desconexión del electrodoméstico

Si necesita apagar el electrodoméstico

por un largo período, se deben seguir los siguientes pasos para evitar la formación de moho en el electrodoméstico.

1. Quite todos los alimentos.
2. Retire el enchufe del toma corrientes.
3. Limpie y seque completamente el interior.
4. Asegúrese de que todas las puertas estén un poco abiertas para dejar que circule el aire.

Limpieza y cuidado

Limpieza y cuidado

Por razones higiénicas, el interior del electrodoméstico, incluidos los accesorios interiores, deberían limpiarse regularmente.

Se debe limpiar y mantener la heladera al menos cada dos meses.



¡Advertencia! ¡Peligro de descarga eléctrica!

- No se debería conectar el electrodoméstico a la red eléctrica mientras se realiza la limpieza. Antes de la limpieza, apague el electrodoméstico y quite el enchufe del toma corrientes, apague o corte el disyuntor o el fusible.

¡Importante!

- Quite los alimentos del electrodoméstico antes de la limpieza. Almacénelos en un lugar fresco y bien cubiertos.
- Nunca limpie el electrodoméstico con un limpiador corriente. La humedad se puede acumular en los componentes eléctricos.
- El vapor caliente puede dañar las partes plásticas.
- Los aceites etéreos y solventes orgánicos pueden atacar las partes

plásticas, por ejemplo el jugo de limón o el jugo de la cáscara de naranja, el ácido butírico, y limpiadores que contienen ácido acético. No permita que estas sustancias entren en contacto con las partes del electrodoméstico.

- No utilice ningún limpiador abrasivo.
- Limpie el electrodoméstico y los accesorios interiores con un paño y agua tibia. También se pueden utilizar los detergentes para limpiar platos que estén comercialmente disponibles.
- Después de realizar la limpieza, limpie con agua fresca y un paño limpio.

- Después de que esté todo seco, el electrodoméstico está listo para volverse a usar.

Descongelación

¿Por qué hay que descongelar?

- El agua contenida en los alimentos o el aire que ingresa a la heladera mediante la apertura de las puertas puede formar una capa de hielo adentro. Si la escarcha es muy espesa puede debilitar la refrigeración. Debería descongelar si hay más de 10mm de

espesor.

Descongelar en el compartimiento del congelador

● La descongelación en el compartimiento del congelador es operada manualmente. Antes de descongelar, saque los alimentos; saque la bandeja de hielo o póngalo en la cámara frigorífica temporalmente, luego gire la perilla del regulador de temperatura a la posición "0" (donde el compresor va a dejar de trabajar) y deje la puerta del refrigerador abierta hasta que el hielo y la escarcha se disuelvan bien y se acumulen en la bandeja de goteo. Limpie el agua con un paño suave. En caso de aceleración del proceso de descongelación, puede poner un tazón con agua tibia (sobre 50 °C) en el compartimiento del congelador, y rascar el hielo y la escarcha con una espátula de deshielo. Después de hacerlo, asegúrese de colocar la perilla del regulador de temperatura en su posición original. No es recomendable calentar el

compartimiento del congelador directamente con agua caliente o secador de cabello durante la descongelación para evitar la deformación de la caja interior. Tampoco es recomendable rascar el hielo y la escarcha o separar los alimentos de los recipientes que han sido congelados junto con los alimentos con herramientas afiladas o barras de madera, para no dañar la carcasa interior.

● **¡Advertencia!** Debería subir la bandeja de descongelación antes de quitarla.

● **¡Advertencia!** Desconecte el electrodoméstico antes de descongelar, gire el regulador de temperatura a la posición "0".

● **Importante!** El refrigerador se debe descongelar por lo menos cada mes. Durante su uso, si la puerta era frecuentemente abierta o el electrodoméstico era utilizado en humedad extrema, le recomendamos que descongele cada dos semanas.

Inversión de la puerta

Si el lugar de instalación lo requiere, se puede cambiar el lado en el que se abre la puerta, del lado derecho (tal como se suministra) al lado izquierdo.

Herramientas que necesitará:

1. Destornillador de estría de 8mm.



2. Destornillador de cruz.




3. Espátula o destornillador de punta fina.





Antes de comenzar, coloque el refrigerador dado vuelta para ganar acceso a la base; debería recostarlo en el embalaje de espuma suave o en un

material similar para evitar que se dañe la tubería de refrigeración la parte posterior del refrigerador.

1. Quite la bisagra superior, transfírala al lado izquierdo y ajústela de manera segura. Luego, colóquela en un lugar seguro.

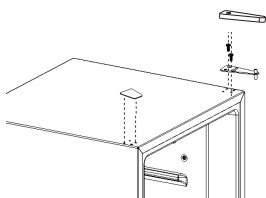

2. Quite ambas patas ajustable de la bisagra superior y la almohadilla de apoyo de goma desatornillando los pernos. Luego, ajústelas como se muestra en la siguientes imágenes.

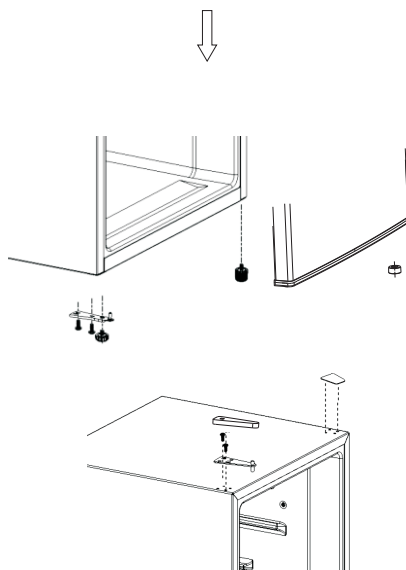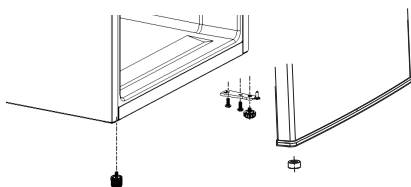

3. Reemplace la tapa al colocar el centro de la bisagra superior en el orificio de la puerta superior asegurándola con 2 tornillos. Reemplace los cobertores del tornillo.

¡Advertencia!

No se debe conectar el electrodoméstico a la red eléctrica cuando se cambia el lado en el que la puerta se abre. Primero, quite el enchufe de la red eléctrica.

Solución de problemas

Si tiene algún problema con el electrodoméstico o le preocupa que el electrodoméstico no esté funcionando correctamente, puede realizar algunas verificaciones fáciles antes de llamar al servicio. Vea lo siguiente. Puede realizar algunas verificaciones simples en esta sección antes de llamar al servicio.

¡Advertencia! No trate de reparar el electrodoméstico usted mismo. Si el problema persiste después de realizar la verificaciones mencionadas, contacte a un electricista calificado, a un ingeniero de servicio o a la tienda donde compró el producto.

Problema	Posible causa	Solución
El electrodoméstico no funciona.	El electrodoméstico no está encendido.	Encienda el electrodoméstico.
	El enchufe principal no está enchufado o está flojo.	Inserte el enchufe.
	El fusible se fundió o está defectuoso.	Verifique el fusible, reemplácelo si es necesario.
	El toma está defectuoso.	El mal funcionamiento del toma tiene que ser reparado por un electricista.
Los alimentos están muy cálidos.	La temperatura no está establecida correctamente.	Vea la sección de "Arranque inicial".
	La puerta se abrió por un período extenso.	Abra la puerta sólo cuando sea necesario.
	Una gran cantidad de alimentos tibios se colocaron en el electrodoméstico dentro de las últimas 24 horas.	Gire temporalmente el regulador de temperatura a una configuración más fría.
	El electrodoméstico está cerca de fuentes de calor.	Vea la sección de "Lugar de instalación".
Grandes formaciones de escarcha, también en el sello de la puerta.	El sello de la puerta no está hermético (posiblemente después de invertir la puerta).	Caliente cuidadosamente las secciones con fugas en el sello de la puerta con un secador de pelo (en una configuración fría). Al mismo tiempo, brinde forma con la mano al sello de la puerta mientras esté cálido para que quede correctamente.
Sonidos inusuales.	El electrodoméstico no está nivelado.	Reajuste las patas.
	El electrodoméstico toca la pared u otros objetos.	Mueva ligeramente el electrodoméstico.
	Un componente, por ejemplo la tubería, en la parte posterior del electrodoméstico está tocando otra parte del electrodoméstico o la pared.	Si es necesario, doble cuidadosamente el componente.
El compresor no comienza inmediatamente después de cambiar la configuración de temperatura.	Esto es normal, no ocurrió ningún error.	El compresor arranca después de un período de tiempo.
Agua en el suelo o en los estantes de almacenamiento.	Compruebe que la bandeja de goteo sea instalada correctamente. La bandeja de goteo está llena de agua.	Vea la sección de "Limpieza y cuidado".

Eliminación del electrodoméstico

Está prohibido desechar el electrodoméstico como desperdicios domésticos.

Materiales de empaque

Los materiales de empaque con el símbolo de reciclaje son reciclables. Deseche los materiales de empaque en un contenedor de desperdicio adecuado para ser reciclado.

Antes de la eliminación del electrodoméstico

1. Retire el enchufe del toma corrientes.
2. Corte el cable de alimentación y descártelo con el enchufe principal.

¡Advertencia! Los refrigeradores contienen refrigerantes y gases en el aislante. El refrigerante y los gases deben ser eliminados por profesionales ya que pueden causar daños en la vista o incendios. Asegúrese de que la tubería del circuito refrigerante no esté dañada antes de realizar la eliminación.

	Eliminación correcta del producto
	Este símbolo en el producto o en el empaque indica que no se puede tratar como residuos domésticos. Se debería llevar al punto de recolección de desechos adecuado para reciclar las partes eléctricas y el equipo electrónico. Si se asegura que este producto se deseche correctamente, ayudará a prevenir posibles consecuencias negativas para el ambiente y la salud humana que, de lo contrario, se podrían causar por el manejo inadecuado en la eliminación de este producto. Para más información sobre el reciclaje de este producto, contacte a su municipio local de servicio de recolección de residuos o a la tienda donde compró el producto.

Hisense

life reimagined